



495 Old Turnpike Rd. • Mount Holly, VT 05758


1.800.639.2521 1.802.259.2213 Fax 1.802.259.3180

www.countrysidealarms.com



Model IFP-1000 Basic Operating Instructions

These Instructions must be framed and displayed next to the IFP-1000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

Alarms / Resetting	Task to Perform
Silence Alarms and Troubles	Press SILENCE then enter a code if prompted. Silence LED will light.
Reset Alarms	Press RESET then enter a code if prompted.
Acknowledge Alarms and Troubles	Press ACK then enter a code if prompted. When the Alarm or Trouble is Acknowledged an 'A' will appear in the annunciator display as shown Below. <div style="border: 1px solid black; padding: 5px; margin: 10px 0; width: fit-content;"> <pre> TROUBLE: SMOKE-ION MODULE_33 POINT_1 [2001] [M33:001] A MISSING 1 of 1 </pre> </div> <div style="margin-left: 400px;">  Acknowledge Mark </div>
View Alarms, Supervisories and Troubles	For each type of condition press the ↓ or ↑ button associated for Alarms, Supervisories or Troubles
Conduct a Fire Drill	Press the DRILL button then enter a code if prompted. or 1. Press ENTER to access Main Menu. 2. Then press 1 to select System Tests. 3. Enter code if prompted, then press 1 to select Fire Drill. 4. Press ENTER to start the Fire Drill. 5. Press ENTER to end the Fire Drill.
View a Points Status	1. Press ENTER to access Main Menu. 2. Then press 2 to select Point Functions. 3. Enter code if prompted, then press 2 to select Point Status 4. Select the module the device is located on by using the ↓ or ↑ . Then press ENTER . 5. Enter the point number.
For Service call:	(800) 639-2521



495 Old Turnpike Rd. • Mount Holly, VT 05758

1.800.639.2521 1.802.259.2213 Fax 1.802.259.3180

www.countrysidealarms.com



Model IFP-1000 Basic Operating Instructions

These Instructions must be framed and displayed next to the IFP-1000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

Maintenance	Task to Perform
Check Detectors Sensitivity	<ol style="list-style-type: none"> 1. Follow steps 1 through 5 for viewing a point status. 2. Press → to view detector sensitivity.
Set Date and Time	<ol style="list-style-type: none"> 1. Press ENTER to access Main Menu. 2. Then press 4 to select Set Time & Date. Enter code if prompted. 3. Make changes in the fields on the screen as necessary. 4. Press ENTER if you wish to keep the changes. 5. Press ENTER to set the entered time and date.
Enable / Disable a Point	<ol style="list-style-type: none"> 1. Rotate the key or enter a code to access Main Menu. 2. Then press 2 to select Point Functions. 3. Then press 1 for Disable / Enable Point. 4. Then press 7 for Disable / Enable Point. 5. From the list that displays, use the ↑ or ↓ to select the module you want, then press ENTER. Then key in the point number you want to view and press ENTER. 6. Press → to toggle the point between NORMAL (enabled) and DISABLED.
View Event History	<ol style="list-style-type: none"> 1. Press ENTER to access Main Menu, then rotate key or enter a code if prompted. 2. Press 3 to select Event History. 3. Press the ↓ or ↑ to view events in the history buffer.
For Service call:	(800) 639-2521