

495 Old Turnpike Rd. · Mount Holly, VT 05758

1.800.639.2521

1.802.259.2213

Fax 1.802.259.3180

www.countrysidealarms.com



Farenhyt Authorized Distributor

Model IFP-2000 Basic Operating Instructions

These Instructions must be framed and displayed next to the IFP-2000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

Alarms / Resetting	Task to Perform
Silence Alarms and Troubles	Press SILENCE . Silence LED will light.
Reset Alarms	Press RESET.
Acknowledge Alarms and Troubles	Press ACK. When the Alarm or Trouble is Acknowledged an 'A' will appear in the annunciator display as shown Below. Site 1 Panel 1 A Acknowledge Mark Trouble: Smoke - Photo Missing SBUS 97 Sensor 1 01/14/10 06:04:52 1 of 636
View Alarms,	For each type of condition press the or associated for Alarms, Supervisories or
Supervisories and Troubles	Troubles
Normal Standby	Green LED on "Silent Knight IFP-2000 All Systems Normal"
Conduct a Fire Drill	 Call Keene Fire Department to advise a drill will be conducted. Then press Enter code. Activate a device. When drill is complete press SILENCE and RESET Then press 1 to reactivate system. Enter code. Call Keene Fire Department to advise that drill has been completed.
View a Points Status	 Press ENTER to access Main Menu, then rotate key or enter a code if prompted. Then press to select Point Functions. Enter code if prompted, then press to select Point Status Select the module the device is located on by using the or the point number.
For Service call:	(800) 639-2521



495 Old Turnpike Rd. · Mount Holly, VT 05758

1.800.639.2521

1.802.259.2213

Fax 1.802.259.3180

www.countrysidealarms.com



Farenhyt Authorized Distributor

Model IFP-2000 Basic Operating Instructions

These Instructions must be framed and displayed next to the IFP-2000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

Maintenance	Task to Perform
Check Detectors	1. Follow steps 1 through 5 for viewing a point status.
Sensitivity	2. Press to view detector sensitivity.
Set Date and Time	1. Press ENTER to access Main Menu.
	2. Then press 4 to select Set Time & Date. Enter code if prompted.
	3. Make <u>changes</u> in the fields on the screen as necessary.
	4. Press ENTER if you wish to keep the changes.
	5. Press ENTER to set the entered time and date.
Enable / Disable a Point	1. Press ENTER to access Main Menu, then rotate key or enter a code if prompted.
	2. Then press 2 to select Point Functions.
	3. Enter code if prompted, then press 1 to select Disable / Enable Pt.
	4. Select the module the point is located on by using the or . Then press ENTER.
	5. Enter the point number.
View Event History	1. Press ENTER to access Main Menu, then rotate key or enter a code if prompted.
	2. Press 3 to select Event History.
	3. Press the or to view events in the history buffer.
For Service call:	(800) 639-2521