



Model IFP-2100 Basic Operating Instructions

These instructions must be framed and displayed next to the IFP-2100 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

FS = Fire System	
Operation	Task to Perform
Silence Alarms and Troubles	Press SILENCE then enter a code if prompted. Silence LED will light.
Reset Alarms	<ol style="list-style-type: none"> 1. Press RESET. 2. Press 1 to Reset Fire System.
View all active alarms, troubles, and supervisory signals	<p>The highest priority event will display first. Press the Down arrow to view location and type of alarm or trouble.</p> <div style="border: 1px solid black; background-color: #e0e0e0; padding: 10px; text-align: center; margin: 10px auto; width: fit-content;"> <pre style="font-family: monospace; font-size: 0.8em;"> FIRE: ALARM SUPERVISORY TROUBLE CO: ALARM SUPERVISORY EMERGENCY: ALARM SUPERVISORY <Press ↓ for status></pre> </div>
View a Point's Status	<ol style="list-style-type: none"> 1. Press ENTER to access Main Menu. 2. Press 2 to select Point Functions. 3. Then press 2 to select Point Status. 4. Select the module the device is located on by using the Up or Down button. Then press ENTER. 5. Enter the point number.
Conduct a Fire Drill	<p>Hold the DRILL button and then enter a code if prompted. OR</p> <ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 1 to select System Tests. 3. Enter code if prompted, then press 1 to select Fire Drill. 4. Press ENTER to start the fire drill, and Press ENTER to end the fire drill. <p>NOT APPROVED BY VERMONT FOR FIRE DRILLS.</p>

Set Time and Date	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 4 to select Set Time & Date. Enter a code if prompted. 3. Make changes to the fields on the screen as necessary. 4. Press ENTER if you wish to keep the changes. 5. Press ENTER to set the entered time and date.
Enable / Disable a Point	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 2 to select Point Functions. 3. Enter code if prompted, then press 1 to select Disable / Enable Point. 4. Press 7 to select Disable/Enable Point. 5. Select the module the point is located on by using the up or down arrow. Then press ENTER. 6. Enter the point number then press ENTER. 7. Press the right arrow to Disable/Enable Point.
To Gain /Request ECS Control	<ol style="list-style-type: none"> 1. Press the  Button and follow the on-screen Instructions. <p><i>Note: When ECS Control LED is blinking, another LOC has ECS Control. ECS Control LED is on steady when the LOC has ECS Control.</i></p>
For Service call:	<p>(800) 639-2521</p>